- 1. Width: Measure the <u>INSIDE</u> of the valance, get as close to the top as possible. Then take off 1 inch from your measurement.
- 2.**Drop Length:** Measure from the <u>INSIDE</u> top of the valance, or mounting position, to the bottom of the window frame.

